3. Exploded View and Parts List

Page

3-1 Cabinet Assembly - - -

3-1 Cabinet Assembly

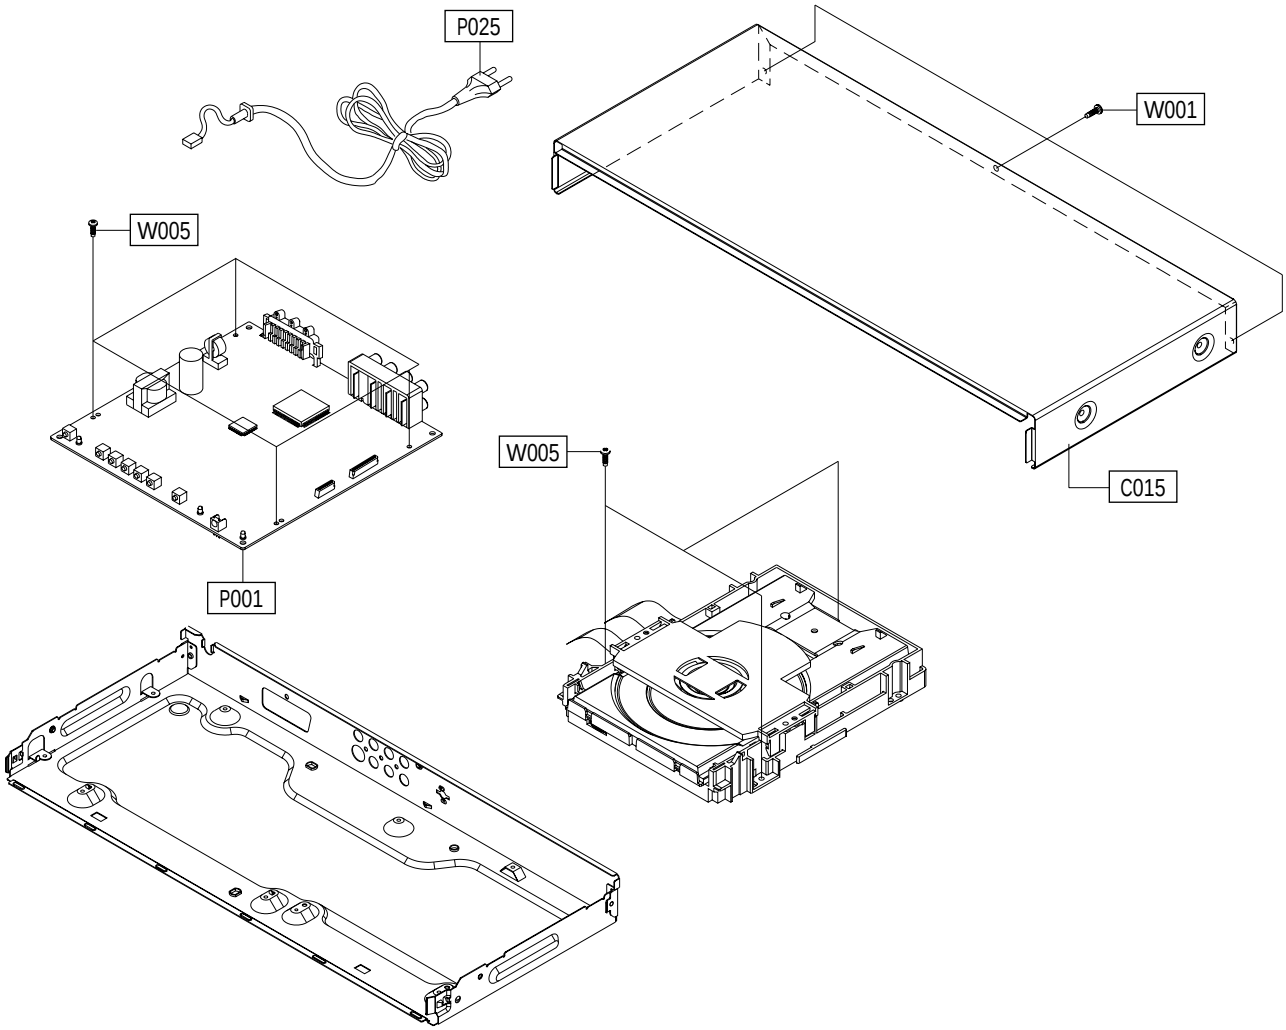

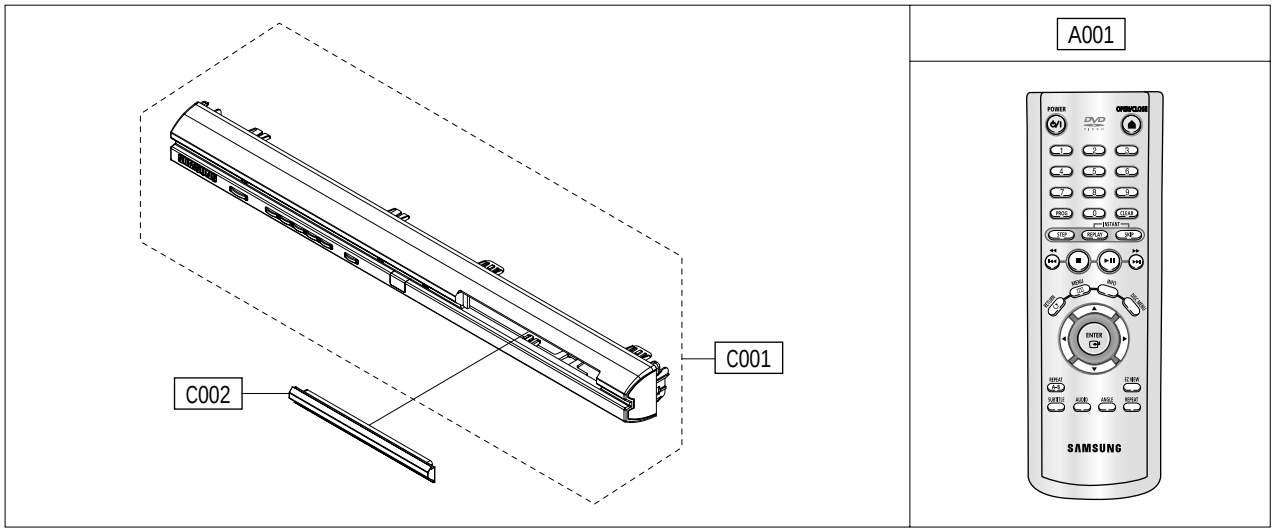

Loc. No	Parts No.	Description ; Specification	Remark
A001	AK59-00011K	REMOCON-ASSY;DVD-P240/XAA,XAA,-,-,36,-,-	
C001	AK97-00660E	ASSY CABINET-FRONT;HIPS 94 HB,DVD-P244/X	
C002	AK64-00503B	DOOR-TRAY;DVD-P240/XAA,TSEC,ABS 94HB,T2.	
C015	AK97-00751B	ASSY CABINET-TOP;PCM T0.55,DVD-P144/XEL,	
P001	AK92-00471A	ASSY PCB-MAIN;DVD-P244,MAIN PCB ASSY	Other Only
	AK92-00471B	ASSY PCB-MAIN;DVD-P244/XEV,MAIN PCB ASS	CIS Only
P025	AC39-10019A	CBF POWER CORD;KKP-419C,H03VVH2-F,VDE/KE	Other Only
	AC39-12022K	CBF-POWER CORD;AT,,GP2,HOUING(2P),250V,3	U.K Only
W001	6003-000275	SCREW-TAPTITE;BH,+,B,M3,L10,BLK ,SWCH101	
W005	6003-000261	SCREW-TAPTITE;BH,+,B,M3,L6,ZPC(YEL),SWRC	

3-2 Deck Assembly

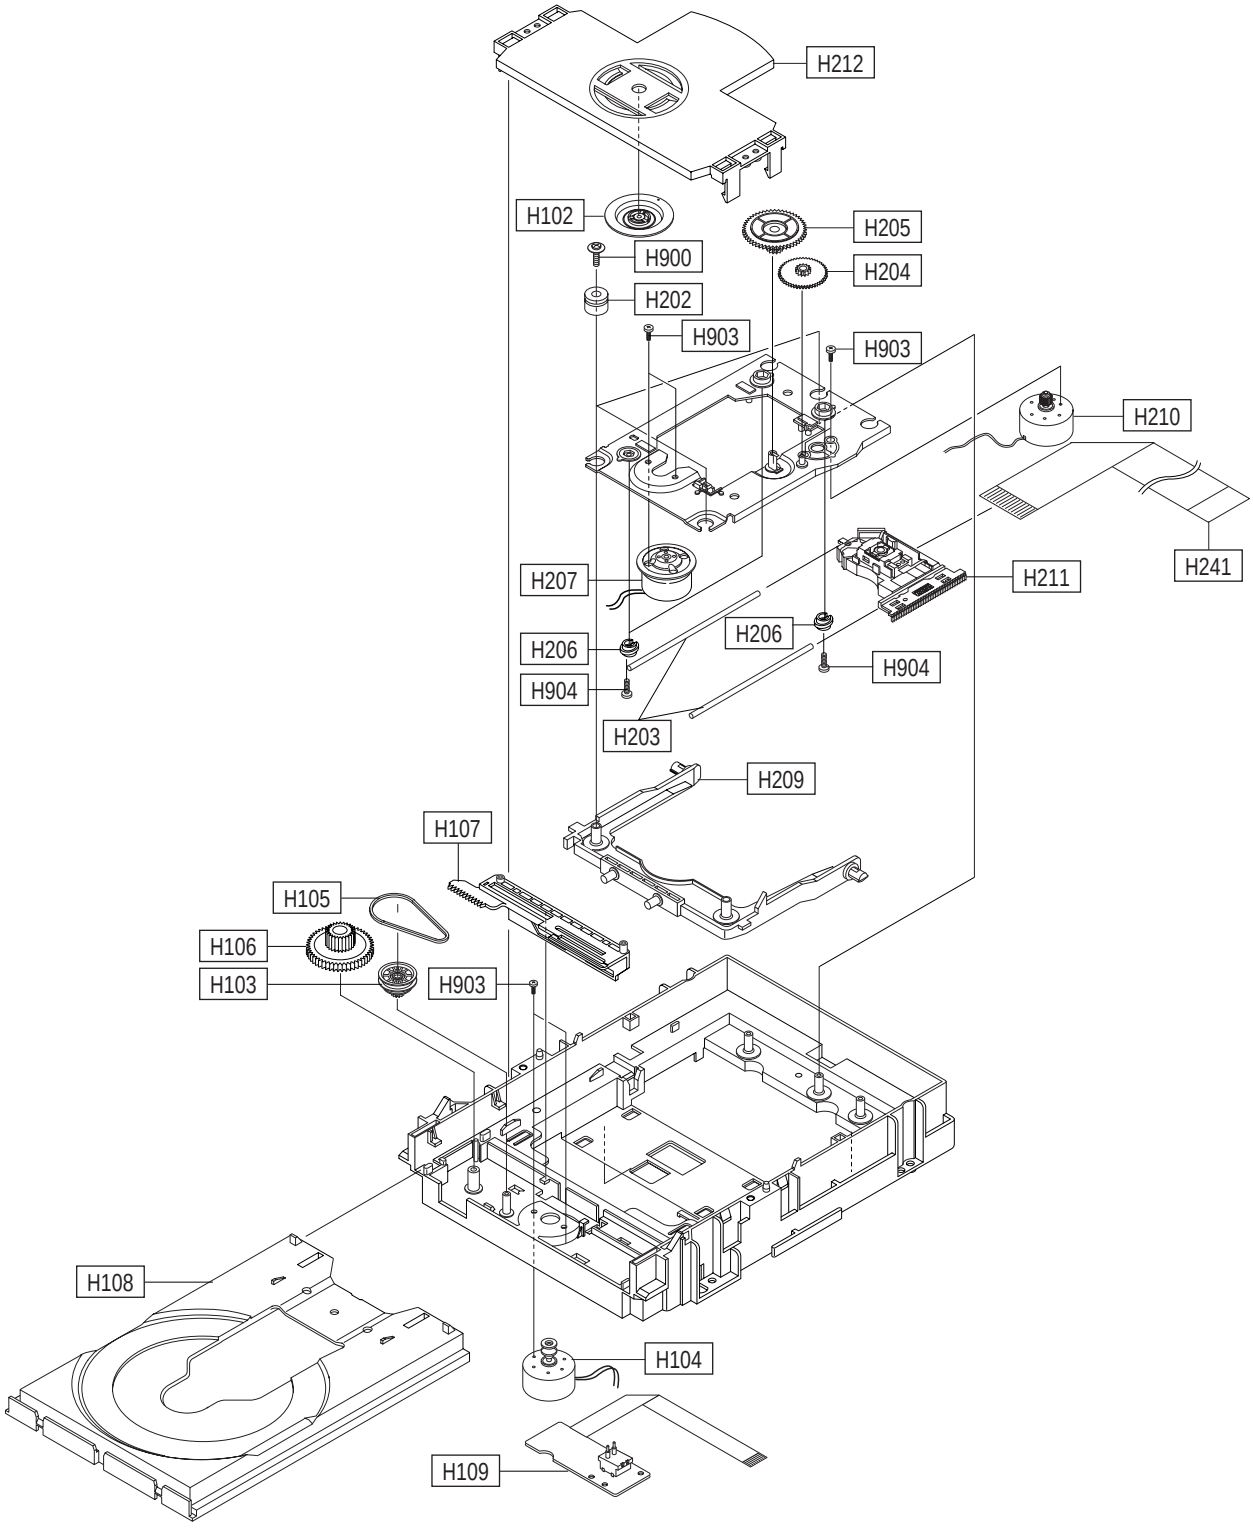

Loc. No	Parts No.	Description ; Specification	Remark
H102	AH66-00111B	CLAMPER-ASSY;DP-5,POM,-,-,-,-,BLK,-	
H103	AK66-00042A	GEAR-PULLEY;DP-15,POM,-,-,-,WHT,-,-,-	
H104	AK97-00608A	ASSY-MOTOR LOAD;-,DP-15,-	
H105	6602-001076	BELT-RECTANGULAR;CR,T1.2,4.3%,1.2X25.1,B	
H106	AK66-00041A	GEAR-TRAY;DP-15,POM,-,-,-,WHT,-,-,-	
H107	AK66-00045A	SLIDER HOUSING;DP-15,POM,-,W17.8,L90,WHT	
H108	AK63-00101A	TRAY-DISC;DP-15,ABS,-,W120,L186.3,-,BLK,	
H109	AK92-00328A	ASSY PCB-DECK;DP-15,-	
H202	AK73-00005B	RUBBER-INSULATOR;DP-15,BUTYL,•'12,HS30,H	
H203	AH61-50327A	SHAFT-P/U;DP-3,SUS,L84.7,OD3,-,-,-	
H204	AK66-00043A	GEAR-FEED A;DP-15,POM,-,-,-,-,-,-,-	
H205	AK66-00044A	GEAR-FEED B;DP-15,POM,-,-,-,-,-,-,-	
H206	AK61-00032A	HOLDER-CAM SKEW;DP-9,POM,-,-,-,BLACK,-	
H207	AK31-00014A	MOTOR SPINDLE;DP-15,3000RPM,-,-,-,-	
H209	AK64-00491A	CHASSIS SUB;DP-15,POM,-,-,-,-,-	
H210	AK31-00005A	MOTOR-FEED ASSY;-,DP-9,-,-,-,-,-,-,-,-,-	
H211	AK97-00638A	ASSY-PICK UP;-,SOH-DT2,TRINO ASSY PICK U	
H212	AK61-00253A	HOLDER-CHUCK;DP-15,POM,-,-,-,-,-	
H241	AK41-00156A	FFC-P U;DP-15,-,FFC,24,T0.3,LEFT	
H900	6003-001157	SCREW-TAPTITE;PWH,+,B,M2,L6,ZPC(YEL),SWR	
H903	6001-001370	SCREW-MACHINE;CH,+,M1.7,L3.0,ZPC(YEL),SW	
H904	6002-001086	SCREW-TAPPING;PH,+,B,M1.7,L5.0,ZPC(YEL),	

MEMO